



A4 Shift Knob

MBA Products


div of
Mallory Industries, Inc.
33 Spring Lane
Farmington, CT 06492
86.409.7806

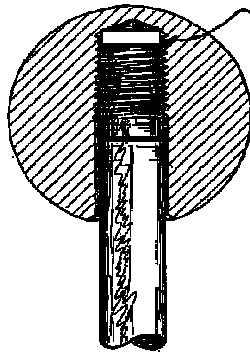


Delrin Plug
This allows for the positive, but soft stop for seating the knob on the shifter shaft.

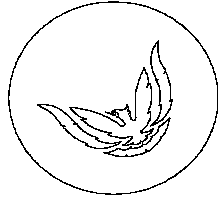

add shim

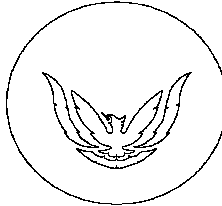

correct

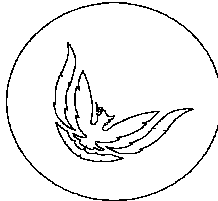

remove shim

Installation instructions.

- 1) Engage Parking Brake.
- 2) Place Shifter into "REVERSE" and remove stock knob from vehicle. See Factory FSM for proper procedure.
- 3) Install supplied set screws into MBA adapter.
- 4) Position MBA adapter over shifter stick while aligning the set screws with the Vertical slots in the stick. until the adapter bottoms out.
- 5) Once adapter has bottomed out, tighten set screws evenly until they are flush with the surface of the adapter or slightly below the surface. Once at this point give an additional 1/4-1/2 turn.
- 6) Install MBA Shift Knob and check for Logo alignment. Add or remove supplied shims as necessary to align logo.
- 7) Check for proper operation of the shifter.

BE ADVISED THAT YOU MUST NOW PUSH THE SHIFT KNOB "**DOWN**" IN ORDER TO SHIFT FROM PARK OR CHANGE GEARS MANUALLY.